

Mounting instructions

PYROLINE® Rapid PLM installation duct system EI30-EI90 according to EN 13501-2



PYROLINE® Rapid PLM installation duct system

© 2022 OBO Bettermann Holding GmbH & Co. KG

PYROLINE® is a registered brand of OBO Bettermann Holding GmbH & Co. KG

Mounting instructions

Table of contents

1	About these instructions
1.1	Target group
1.2	Relevance of these instructions
1.3	Types of warning information
1.4	Applicable documents
1.5	Basic standards and regulations
2	Intended use
3	Safety
3.1	General safety information
3.2	Personal protective equipment
4	Necessary tools
5	System description
5.1	System features
5.2	System overview
	Mounting options for direct mounting
	Mounting options on support systems
5.5	Accessories
6	Planning an installation
6.1	Structural conditions
6.2	Approved fastening materials
6.3	Approved cables
7	Mounting the duct trough
7.1	Shortening ducts
7.2	Direct wall, ceiling, floor mounting
7.3	Mounting on support systems
8	Mounting fittings
8.1	Mounting fittings directly on walls and ceilings
	Mounting fittings on support systems
9	Mounting joint connectors
9.1	Mounting joint connector for PLM D 0810 and PLM D 1220
9.2	Mounting joint connector for installation duct PLM D 0410
9.3	Mounting joint connector for installation duct PLM D 0404
10	Routing cables
11	Mounting the duct cover
	Mounting the duct cover for PLM D 0410, PLM D 0810 and PLM D 122034
	Mounting the duct cover for PLM D 0404
	Creating cable outlets

12.1 Creating an individual outlet	7
12.2 Creating multiple cable outlets	8
12.3 Junction with PLMD 0404	9
13 Wall connection and wall penetration 4	0
13.1 Arrangement in the component opening	0
13.2 Wall connection versions	.1
13.3 Wall penetration versions	2
13.4 Wall connection collar versions	3
13.5 Creating a wall connection	4
14 Ceiling connector4	7
15 Completing mounting	8
15.1 Declaration of conformity	8
16 Maintaining the system	8
17 Dismantling the system	8
18 Disposing of the system	9
19 Technical data	0
Declaration of conformity	3

1 About these instructions



1.1 Target group

These instructions are intended for specialists and/or instructed technical personnel (e.g. engineers, architects, heads of construction, and mounting and installation engineers) who have had fire protection training and are charged with installing the installation duct.

1.2 Relevance of these instructions



These instructions are based on the standards valid at the time of compilation (September 2021).

Please read the instructions carefully before starting mounting. We will not accept any warranty claims for damage caused through non-observance of these instructions.

Any images are intended merely as examples. Mounting results may look different.

In these instructions, cables and lines are referred to simply as cables.

These instructions describe standard solutions for mounting the PYROLINE® Rapid PLM installation duct system. Special solutions for specific structural conditions are possible, but must be planned on-site with the authorities.

To find out more about planning and mounting the product, we recommend a comprehensive training course.

1.3 Types of warning information



Type of risk!

Shows a risky situation. If the safety instruction is not observed, fatal injuries will occur.



Type of risk!

Shows a risky situation. If the safety instruction is not observed, then serious or fatal injuries may occur.



Type of risk!

Shows a risky situation. If the safety instruction is not observed, then medium or minor injuries may occur.



Type of risk!

Shows a hazardous situation. If the safety instruction is not observed, then damage to the product or the surroundings may occur.

Note!

Indicates important information or assistance.

1.4 Applicable documents

- European Technical Assessment ETA 22/0096
- Declaration of performance 05-DOP-016
- Safety data sheets of the products (www.obo-bettermann.com).

1.5 Basic standards and regulations

- DIN EN 1363-1: 2012-10
 Fire resistance tests Part 1: General requirements
- DIN EN 1366-5: 2010-06
 Fire resistance tests for service installations Part 5: Service ducts and shafts
- DIN EN 13501-2: 2016-12
 Fire classification of construction products and building elements –
 Part 2: Classification using data from fire resistance tests, excluding ventilation services
- EU construction products ordinance No. EU 305/2011
- EAD 350003-01-1109 Kit for fire resistant service ducts consisting of prefabricated connection pieces and according accessories

National specifications - Germany:

 Sample Administrative Provision, Technical Construction Regulations 2021-1 (MVV TB*), Appendix 4, Sections 8.2 and 8.3
 *According to national law

2 Intended use

The PYROLINE® Rapid PLM installation duct is used for the installation and guidance of cables up to a maximum diameter of d = 30 mm in escape and rescue routes in interior areas of buildings. If there is a fire, the PYROLINE® Rapid PLM installation duct ensures active fire load encapsulation and prevents the spread of fire for up to 90 minutes. The PYROLINE® Rapid PLM installation duct can be mounted on solid walls and ceilings, either directly or with a support system. Mounting must take place with fastening material with fire protection testing. Ceiling and walls at the mounting location must be made of masonry, concrete, reinforced concrete or porous concrete, and have a minimum thickness of 10 cm (walls) or 15 cm (ceilings). Only then can the correct function of the installation duct be guaranteed.

The PYROLINE® Rapid PLM installation duct is not suitable for any purposes other than those described here. The installation duct is not designed to support walls in wall penetrations. Ensure that the wall penetrations can support themselves. Mounting the installation duct on dry or lightweight construction walls or suspended ceilings is not considered proper use. Using the installation duct to maintain electrical function is likewise forbidden.

3 Safety

3.1 General safety information

Observe the following general safety information:

- All the appropriate regulations and technical regulations of other units, in particular those for electrical engineering, must be complied with.
- The installation duct may not be loaded with heavy weights or used as a support.
- The approved cable load may not be exceeded, as otherwise the support and function capability is no longer guaranteed.

3.2 Personal protective equipment

List of personal protective equipment to be used:



Use hand protection!

During cutting work, metal chips or sharp cut edges can cause injuries to hands! Wear hand protection.



Use eye protection!

During cutting work, metal chips or sharp cut edges can cause injuries to eyes! Wear eye protection.



Use hearing protection!

Cutting work on metal ducts can lead to an increased noise level. Wear hearing protection.



Wear head protection!

The installation duct can lead to head injuries when working overhead. Wear a safety helmet when performing overhead work.



Wear breathing protection!

If there is a fire, burning cable insulation can create corrosive gases. When disposing of fire protection ducts which have been subjected to a fire, wear breathing protection.

4 Necessary tools

List of required tools:

- Angle grinder with metal separating disc
- Knife
- Metal file
- Metal drill bit
- Drill with masonry/concrete bit
- Battery-operated screwdriver
- Screwdrivers, flat, Philips and Torx
- Adjustable spanner/ratchet wrench
- Tape measure
- Spirit level

5 System description

The PYROLINE® Rapid PLM installation duct system is a closed system, made of sheet steel with a profiled cover locking contour, which helps to protect the surrounding area in case of an electrical cable fire by intumescence of the internal fire protection fabric. When a cable fire develops in the interior of the duct, the internal fabric foams up, encapsulating the fire.

5.1 System features

- PYROLINE® Rapid PLM, for wall and ceiling mounting with a support system of wall brackets, or suspended supports and brackets, or threaded rods and profile rails
- 4 system sizes with duct cross-section 40 x 44 mm, 40 x 100 mm, 80 x 100 mm or 120 x 200 mm
- Enclosure (E) and insulation (I) under fire exposure up to 90 minutes (classification El30–El90)
- Material from sheet steel with profiled cover locking contour and intumescent fire protection fabric
- Standard surface coating optionally as strip galvanised sheet steel to EN 10143 or with external surface coating in RAL 9010 (Pure white)
- Factory-made base perforation in the duct trough for quicker attachment to walls and ceilings
- Internal connector with additional sealing from the inside to the outside, installation without tools
- Standardised connection technology between ducts and between ducts and fittings for direction changes
- Joint offset between duct trough and duct cover possible due to internal connector
- Processing with standard tools such as an angle grinder and ratchet wrench
- Installation of the duct cover by snapping in without tools
- Simple inspection and retrofitting
- Factory-made fittings for direction changes
- Routing of standard cable types up to a maximum outside diameter of d = 30 mm or a maximum wire cross-section of 25 mm²
- Installation on OBO support systems

5.2 System overview

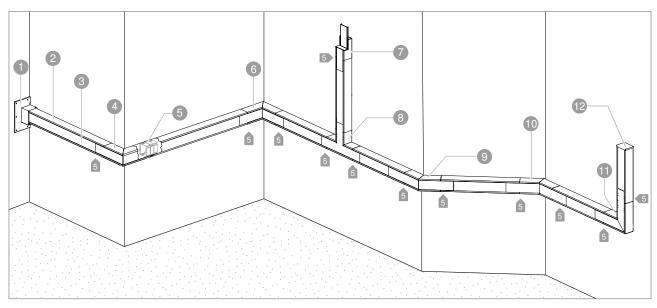


Fig. 1: System overview for wall mounting

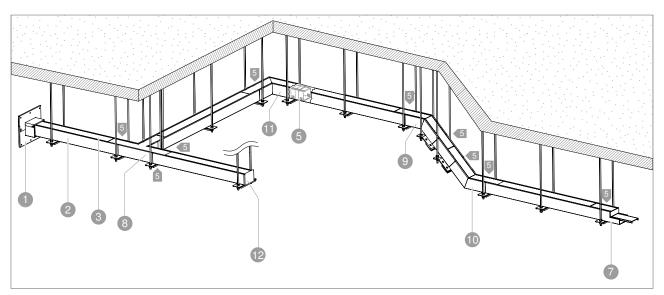
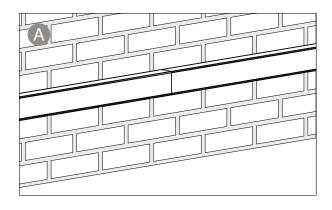



Fig. 2: System overview for suspended mounting


Component/duct system		PLM D 0404 40 x 40 mm	PLM D 0410 40 x 100 mm	PLM D 0810 80 x 100 mm	PLM D 1220 120 x 200 mm
1	Wall connection collar PLM WC	_	✓	✓	✓
2	Installation duct PLM D	✓	✓	✓	✓
3	Installation duct cover PLM LI	_	✓	✓	✓
4	External corner PLM EC	_	✓	✓	✓
5	Joint connector PLM SI	✓	✓	✓	✓
6	Internal corner PLM IC	_	✓	✓	✓
7	Reducer PLM RP	_	✓		✓
8	T branch piece PLM TB	_	✓	✓	✓
9	45° bend, falling PLM BF	_	_	✓	✓
10	45° bend, rising PLM BR	_	_	✓	✓
1	Flat angle PLM FA	_	✓	✓	✓
12	End piece PLM EP	_	✓	✓	✓


5.3 Mounting options for direct mounting

The PYROLINE® Rapid PLM installation duct can be mounted in the following ways:



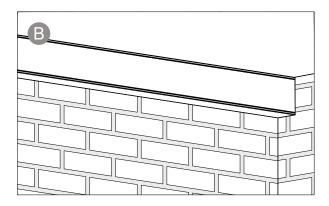

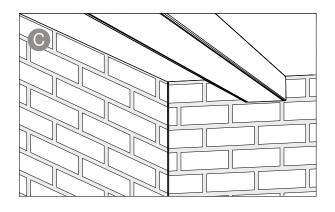

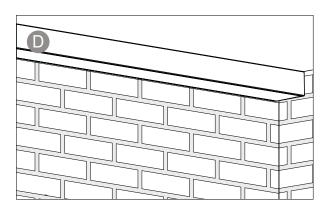

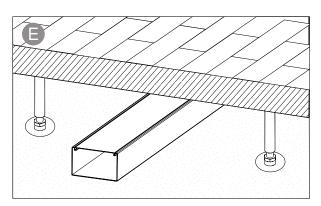


Fig. 3: Direct mounting overview

- A Wall mounting
- B Corner mounting on the wall
- © Ceiling mounting
- Corner mounting under the ceiling
- Mounting below system bases

5.4 Mounting options on support systems

The PYROLINE® Rapid PLM installation duct can be mounted on the following support systems:

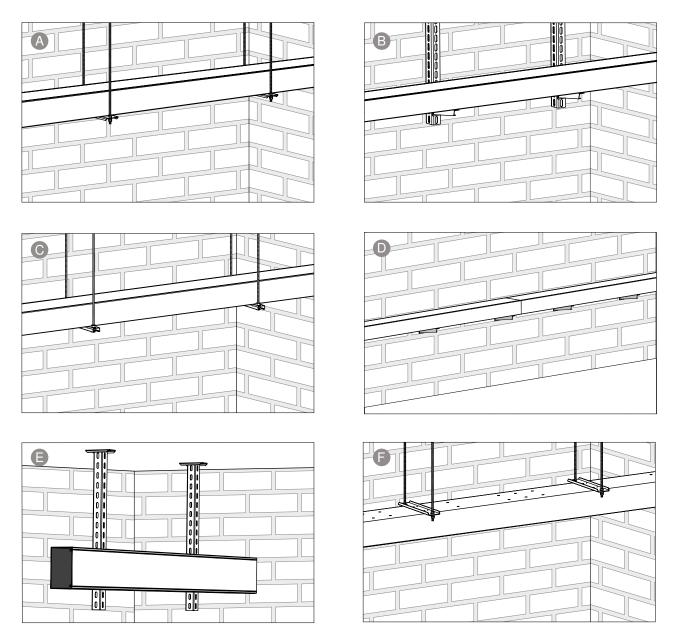


Fig. 4: Overview of mounting on support systems

- A Suspended mounting with threaded rod and support profile
- B Suspended mounting with U support and wall and support brackets
- Suspended mounting with threaded rod and profile rail
- Mounting on wall brackets
- Suspended mounting on U supports
- Suspended mounting below from threaded rod and support profile

5.5 Accessories

Figure	Designation/type	Function
	MIW-S mineral wool	Sealing of remaining openings for wall penetration
	Mineral wool plates	Sealing of remaining openings and support of the installation duct in the wall opening
	Joint spatula	Sealing of remaining openings
1984	PYROCOAT ASX-K or ASX-E ablation coating	Sealing of remaining openings for multiple cable outlets
	Foam cable outlet PLM CO	Multiple cable inlets and outlets
	Brass cable gland, M12 - M50, with locknut Plastic cable gland, M12 - M50, with locknut	Version for single cables
	Cable clamp PLM CB	Cable holder for ceiling mounting
	Cable clamp PLM WB	Cable holder for horizontal wall mounting
	Cable brackets	Cable holder for vertical wall mounting
	Separating retainer	Separation of different electrical voltage levels
	Locking bracket	Subsequent attachment of upper and lower parts (all the way down?)
	Threaded rod TR M10 G/TR M8 G	Mounting the support system (A), (C), (F)
	Support profile	Mounting the support system (A),
299	Profile rail MS 4121P FS	Mounting the support system ©
	Connection component M8/M10	Mounting the support system ©
000000000000000000000000000000000000000	Suspended support US 5 K FT	Mounting the support system B , E
	Wall and support bracket AW 15 FT	Mounting the support system B , D
	DSK 45 spacer FT	Mounting the support system
10000000000000000000000000000000000000	US 5 U support	Mounting the support system B , E in conjunction with head plate

Figure	Designation/type	Function
	Head plate/U support	Mounting the support system B , E in conjunction with U support without head plate
	Variable head plate	Mounting the support system B , E under sloping ceilings in conjunction with U support without head plate
	Connection sleeve CSTR M8 G/CSTR M10 G	Connecting 2 threaded rods
	Fire protection clamp BSB FT	Connection piece between anchor and threaded rod for mounting the support system A, ©, •
	Bolts and nuts M8/M10	Mounting of support system for suspended
	Washers M8/M10	mounting
0	GMS mounting bracket	Vertical suspension

Tab. 1: Accessories

6 Planning an installation

To ensure the functionality of the installation duct, installations and installation locations must fulfil technical and structural requirements.

6.1 Structural conditions

If there are uncertainties about the load capacity of walls and ceilings, corresponding proof of the load capacity must be provided.

- Walls must be made of concrete, reinforced concrete or masonry (e.g. calcareous sandstone, porous calcareous sandstone, full brick) with a minimum thickness of 10 cm.
- Ceilings must be made of concrete, reinforced concrete or porous concrete with a minimum thickness of 15 cm.
- Lightweight walls/partitions and wooden ceilings, as well as steel structures and trapezoidal roofs, are not suitable for the mounting of fire protection ducts.
- Walls and ceilings serving as a mounting surface must have at least the same fire resistance length as the mounted installation duct.
- If various electrical voltage levels are to be separated in an installation duct, the spacing of the various electrical voltage levels must be at least 10 mm. Choose an installation duct with the appropriate width/ height and use separating clamps or brackets.

Note!

6.2 Approved fastening materials

The fastening materials used must be fire protection-tested and certified. The OBO products listed in Tab. 2 and Tab. 3 or equivalent fasteners can be used for wall and ceiling mounting.

Note! Observe the information in the respective usability or applicability certificates.

The specifications refer to the respective maximum load and dimensions as well as the maximum permissible classification of the installation duct. Smaller dimensions and cable loads may have an impact on the choice of fastening material.

Wall mounting

Fastening substrate	Direct mounting	Mounting on wall bracket AW15			
Reinforced or unreinforced normal concrete	O DOMINIO	O Dan			
Wall bricks	MMS+ P 6x35 (Item No. 3498103)	MMS+ SS 10x80 (Item No. 3498124)			
Solid calcareous sandstone					
Porous calcareous sand- stone	MMS+ MS 7.5x50 (Item No. 3498261)	MMS+ V 10x90 (Item No. 3498190)			
Porous concrete	PBD M8x10 (Item No. 3497608)	PBD M10x10 (Item No. 3497616)			
Hollow and porous stone	VMU-A 8-110vz (Item No. 3497820) with VMU-SH 12x80 (Item No. 3497860) with VMUplus injection mortar (Item No. 3497800)				
Timber construction	HT 6 (e.g. Item No. 3498130)	HT 10 (e.g. Item No. 3498140)			

Tab. 2: Fastening material for wall mounting

Ceiling mounting

Fastening substrate	Direct mounting	Suspended with threaded rod	Suspended with U support	Suspended with support (vertical)	
Cracked or uncracked concrete	MMS+P 6x35 (Item No. 3498103) MMS+ MS 7.5x50 (Item No. 3498261)	MMS+ I 7.5x60 (Item No. 3498268)	MMS+ SS 10x80 (Item No. 3498124) MMS+ V 10x90 (Item No. 3498190)	MMS+ SS 10x80 (Item No. 3498124) MMS+ V 10x90 (Item No. 3498190)	
Porous concrete	PBD M8x10 (Item No. 3497608)	PBD i M10 (Item No. 3497704)	PBD M10x10 (Item No. 3497616)	PBD M10x10 (Item No. 3497616)	

Tab. 3: Fastening material for ceiling mounting

6.3 Approved cables

All standard cable types up to a maximum outside diameter of d = 30 mm or a maximum wire cross-section of 25 mm², including optical fibre cables, can always be routed. This excludes hollow core cables and wire cables.

Note!

When dimensioning the cables, note that the electrical resistance of the conductors in the cable is increased through heating. A larger conductor cross-section may be required.

7 Mounting the duct trough

The PYROLINE® Rapid PLM installation duct can be mounted on either the wall, ceiling or floor or on support systems.

7.1 Shortening ducts

If the duct has to be cut due to the duct routing, proceed as described below. To avoid waste, plan duct lengths from room corners.

Note!

A noticeable odour will occur when cutting the installation duct. This is not harmful. If necessary, carry out the cutting operation in a well-ventilated location.



Risk of cutting

During cutting work, metal chips or sharp cut edges can cause injuries to eyes and hands!

- Wear protective glasses and gloves.
- Deburr cut edges.
- 1. Cut installation ducts to the desired length, e.g. using an angle grinder.
- 2. Deburr cut edges.

Note!

When cutting with an angle grinder, the fire protection material may react slightly at the cut edge. This does not impair the fire protection properties of the duct. Cut swollen material as thinly as possible with a knife.

7.2 Direct wall, ceiling, floor mounting

For every 2 m of duct length, there must be 5 fixing points at a distance of 400 mm.

The duct trough has a corresponding bottom perforation (\varnothing 8x12 mm), which is sealed smoke gas-tight by the fire protection fabric inside:

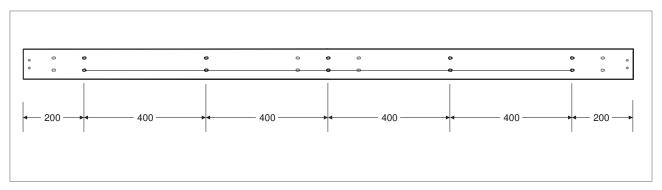


Fig. 5: Hole pattern for horizontal wall mounting

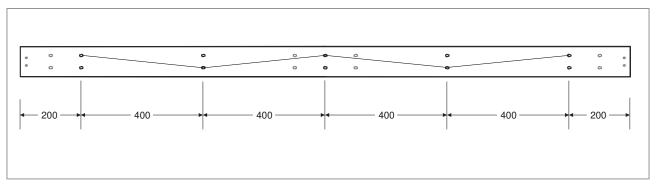


Fig. 6: Hole pattern for vertical wall and ceiling mounting

Note!

The fastening points of the duct on the wall and ceiling also serve as mounting points for cable clamps.

- With horizontal wall mounting, cable clamps can be used only in the lower level.
- For vertical wall mounting and ceiling mounting, the diagonal arrangement of the cable clamps enables the separation of 2 voltage levels in the duct.

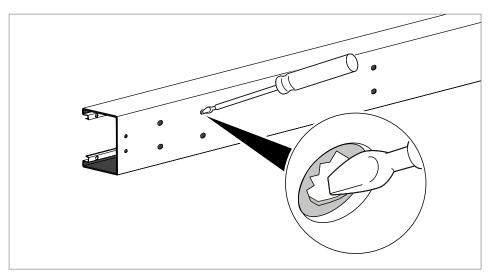


Fig. 7: Piercing the fire protection fabric at the fastening points

- 1. Pierce the inner fire protection fabric at the fastening points with a pointed object.
- 2. Transfer the drill holes to the fastening substrate.



Loss of function in case of fire!

Drilling depth and drill hole diameter according to the approval of the fire protection tested fastening material, see also "6.2 Approved fastening materials" on page 14.

- 3. Drill fastening holes.
- 4. Clean the drill holes carefully, e.g. through suction or blowing-out.

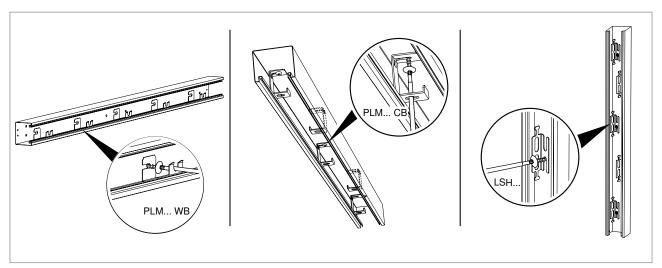



Fig. 8: Mounting the duct trough


5. Mount the duct on the substrate. For wall and ceiling mounting fix the duct together with PLM... WB, PLM... CB or LHS... cable clamps.


7.3 Mounting on support systems


7.3.1 Support system options


The support systems described in "5.4 Mounting options on support systems" on page 11 are available for mounting on support systems. These can be mounted from the following components:

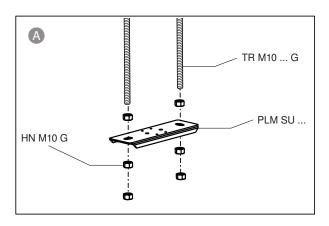

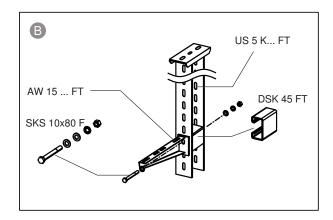

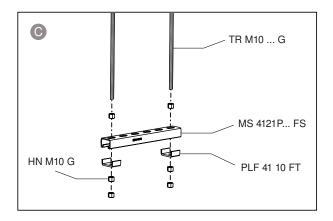

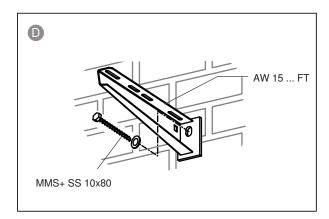

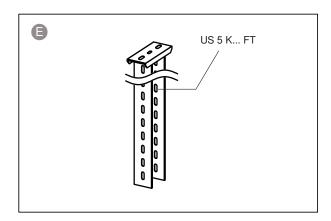

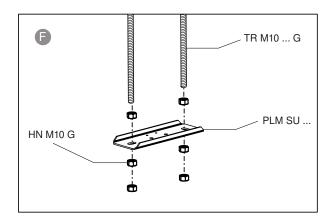


Fig. 9: Mounting support systems

7.3.2 Support spacings

The maximum support spacing for suspended mounting is 1 m. When mounting with mounting rail according to fig. 10, cantilever nor U support the distance to the joint must be at least 100 mm so that the PLM SI... joint connector can be mounted without a problem.

Note!

Alternatively, when mounting with support profiles (A) according to fig. 12 and (E), the suspended support can be mounted directly beneath the joint, e.g. when mounting fittings (see also chapter 8.2.1 on page 24). For this purpose, use the connector bolt BSKM-S4008 Item No. 3498092 to con-

tinue to ensure problem-free mounting of the joint connector.

The duct trough has a corresponding bottom perforation, which is sealed flue gas-tight by the fire protection fabric inside:

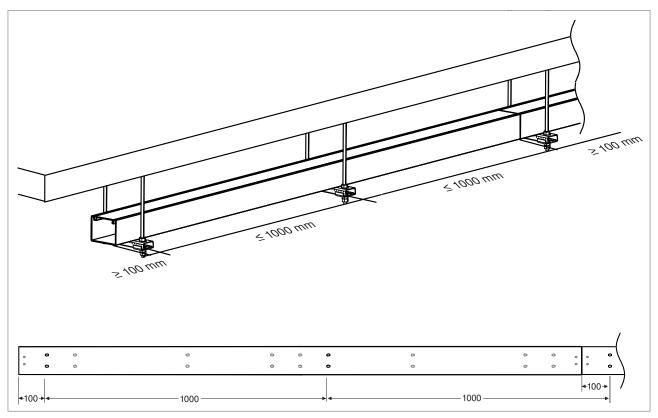


Fig. 10: Support spacings and fastening points on the duct

7.3.3 Mounting the support system and installation duct



Loss of function in case of fire!

Use only the support systems listed above and fastening materials that have been tested for fire protection, for examples see "6.2 Approved fastening materials" on page 14.

- 1. Pre-drill fastening holes according to the support spacing to suit the support system and fastening material.
- 2. Clean the drill holes carefully, e.g. through suction or blowing-out.
- 3. Mount the support system in accordance with Fig. 9.

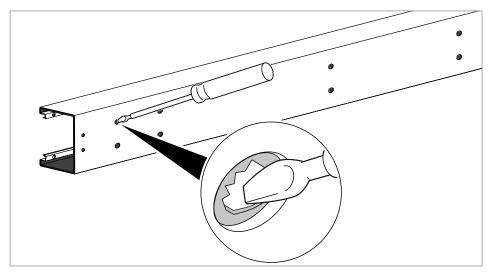


Fig. 11: Piercing the fire protection fabric at the fastening points

4. Pierce the inner fire protection fabric of the installation duct at the fastening points with a pointed object.

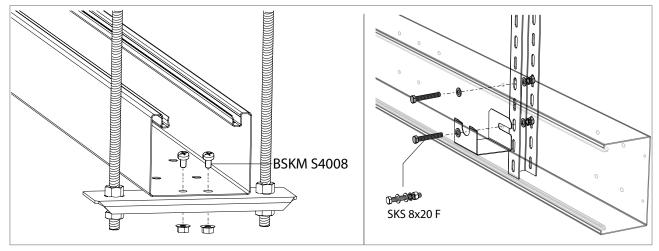


Fig. 12: Fixing the duct troughs on the support system

5. Fix the duct trough at the fastening points on the support system with 2 bolts BSKM S4008.

8 Mounting fittings

The fittings for the PYROLINE® Rapid PLM installation duct can be mounted on either the wall, ceiling or floor or on support systems.

8.1 Mounting fittings directly on walls and ceilings

Note!

The mounting of fittings on walls, ceilings or floors is described using the flat angle as an example. Install all fittings of the installation duct system in accordance with this principle.

1. Mount the duct troughs as described in chapter "7.2 Direct wall, ceiling, floor mounting" on page 17.

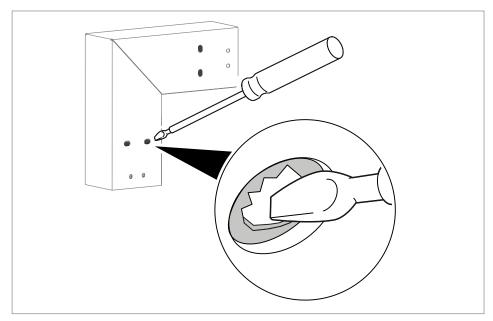


Fig. 13: Piercing the fire protection fabric at the fastening points

- 2. Pierce the fire protection fabric at the fastening points.
- 3. Transfer the drill holes to the fastening substrate.
- 4. Drill fastening holes.

Note! Drilling depth and drill hole diameter according to the approval of the fire protection-tested fastening material, see also "6.2 Approved fastening materials" on page 14.

5. Clean the drill holes carefully, e.g. through suction or blowing-out.

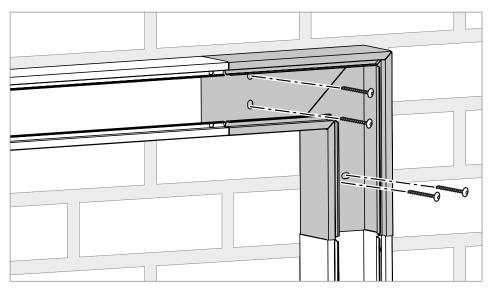


Fig. 14: Mounting fitting

6. Mount fittings using suitable fastening material, see "Approved fastening materials" on page 14.

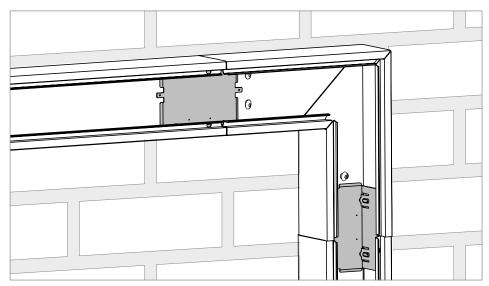


Fig. 15: Mounting joint connectors

- 7. Mount joint connector at all joints of the fittings as described in chapter 8.1–8.3.
- → Lay cables as described in chapter "Routing cables" on page 33.
- → Mount duct cover and fitting cover as described in "Mounting the duct cover" on page 34.

8.2 Mounting fittings on support systems

8.2.1 Mounting fittings on support system (A)

Note!

The mounting of fittings is described using the A with flat angle as an example. Install all fittings of the installation duct system in accordance with this principle. Implement the mounting variant accordingly.

1. Mount the duct troughs as described in chapter "7.3 Mounting on support systems" on page 19.

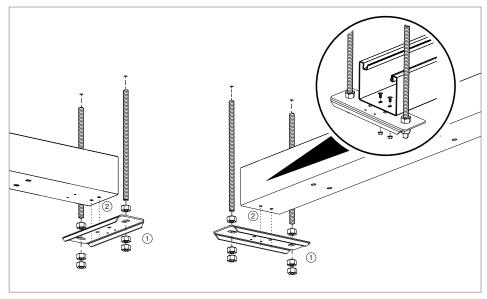


Fig. 16: Mounting the suspension at the joint

- 2. Mount the suspensions at the joints centrally beneath the joint ①.
- 3. Fix the duct with 2 self-tapping screws each (BSKM S-4008) on the support profile 2.

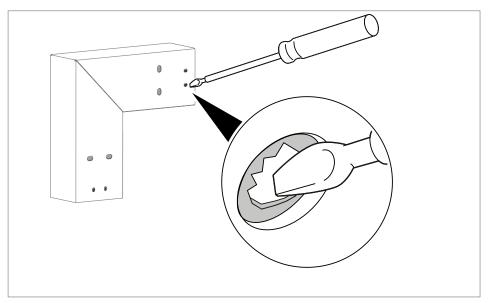


Fig. 17: Piercing the fire protection fabric at the fastening points

4. Pierce the fire protection fabric at the 4 fastening points.

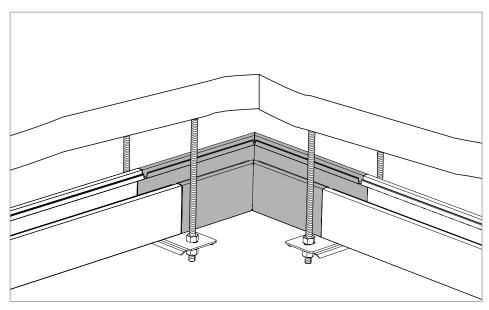


Fig. 18: Mounting fittings on supports

5. Fix the fittings to the fastening points with 2 self-tapping screws each (BSKM S-4008) on the support profile.

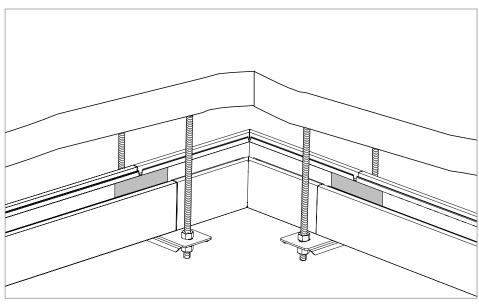


Fig. 19: Mounting the joint connectors

- 6. Mount joint connector at all joints of the fittings as described in chapter 8.1–8.3.
- → Lay cables as described in chapter "Routing cables" on page 33.
- → Mount duct cover and fitting cover as described in "Mounting the duct cover" on page 34.

8.2.2 Mounting fittings on support system ⁽³⁾/₍₃₎

Note!

A suspension must be installed 100 mm from every fitting joint. At least one suspension must be placed beneath the fitting. When mounting the T branch piece, 2 suspensions must be placed beneath the fitting.

1. Mount the duct troughs as described in chapter "7.3 Mounting on support systems" on page 19.

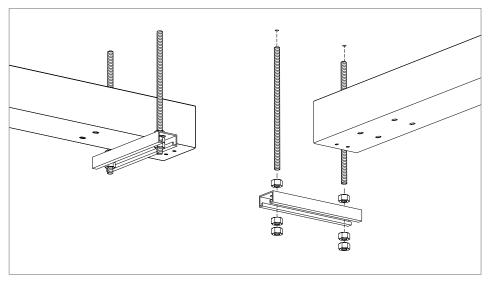


Fig. 20: Mounting support system for fitting

2. Mount support system for the fitting.

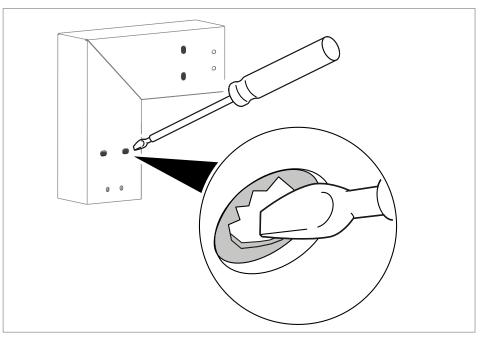


Fig. 21: Piercing the fire protection fabric at the fastening points

3. Pierce the fire protection fabric at the 2 fastening points.

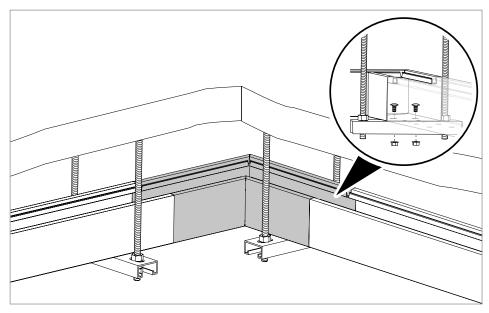


Fig. 22: Mounting fitting

- 4. Fix the fitting at the fastening points on the support system with 2 truss-head bolts (FRSB 6x15 F).
- → Mount joint connector at all joints of the fittings as described in chapter 8.1–8.3.
- → Lay cables as described in chapter "Routing cables" on page 33.
- → Mount duct cover and fitting cover as described in "Mounting the duct cover" on page 34.

8.2.3 Mounting 45° rising/falling bends

The fittings 45° rising bend and 45° falling bend must be suspended at or next to every joint. To do this, mount the support systems A with support profile and B with mounting rail with mounting angle GMS.

Note!

The mounting of the support system is shown using support system A as an example. When mounting with support system B, with mounting rail, the mounting of the mounting angle is identical. The suspension points are 100 mm in front of and behind the joint as described in "Mounting on support systems" on page 19.

1. Mount the installation duct and support system and installation duct as described in "7.3 Mounting on support systems" on page 19.

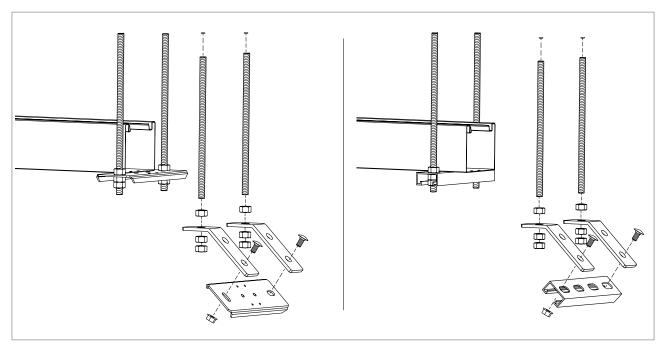


Fig. 23: Mounting the mounting angle

- 2. Mount the support system on the vertical suspension point with mounting angle GMS.
- 3. Pierce the fire protection fabric at the 2 fastening points of the fitting.

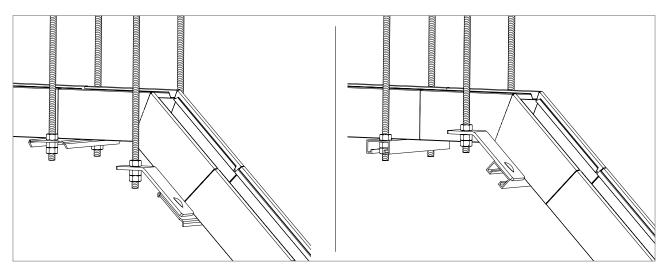


Fig. 24: Mounting fitting

- 4. Fix the fittings to the fastening points with 2 self-tapping screws each (BSKM S-4008) on the support profile or truss-head bolts M6 to other support systems.
- → Mount joint connector at all joints of the fittings as described in chapter 8.1–8.3.
- → Lay cables as described in chapter "Routing cables" on page 33.
- → Mount duct cover and fitting cover as described in "Mounting the duct cover" on page 34.

9 Mounting joint connectors

Note!

Joints between 2 ducts as well as between a duct and a fitting are produced in the same way for all mounting versions and for all fittings using the connector set type PLM SI....

A joint connector must be mounted at every joint between ducts or duct and fitting!

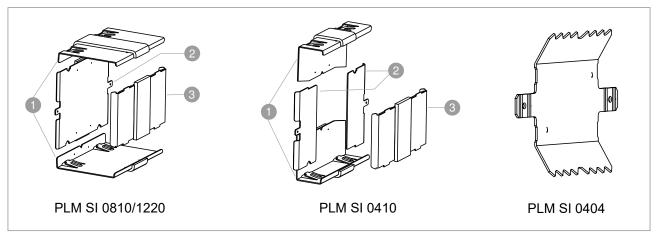


Fig. 25: Joint connector PLM SI...

- Side section
- 2 Floor plate
- 3 Cover support

9.1 Mounting joint connector for PLM D 0810 and PLM D 1220

- Suitable connector set for PLM D 0810: PLM SI 0810
- Suitable connector set for PLM D 1220: PLM SI 1220

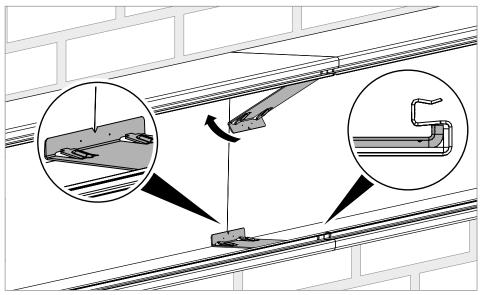


Fig. 26: Inserting the side sections of the connector set

1. Clamp the side sections centrally over the joint behind the closing

contour of the installation duct and press onto the duct wall.

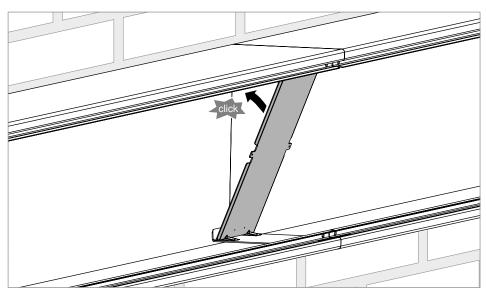


Fig. 27: Inserting the floor plate

2. Position the floor plate on one side with the notches behind the clamp springs of the side section and snap-in to the opposite side section.

Note!

The cover support is used for the cover mounting after the cable assignment, see also "11 Mounting the duct cover" on page 34.

9.2 Mounting joint connector for installation duct PLM D 0410

- Suitable connector set for PLM D 0410: PLM SI 0410

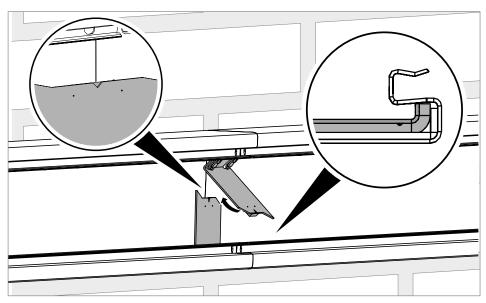


Fig. 28: Inserting the side sections of the connector set

1. Clamp the side sections centrally over the joint behind the closing contour of the installation duct and press onto the duct wall.

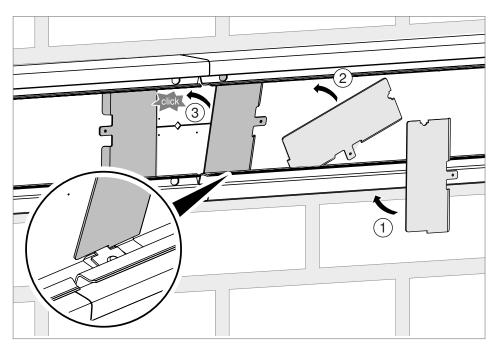


Fig. 29: Inserting the floor plates of the connector set

- 2. Turn the floor plates slightly to position them in the installation duct.
- 3. Position the side with the narrow notch below the clamp spring and snap-in to the opposite clamp spring.

Note! The cover support is used for the cover mounting after the cable assignment, see also "11 Mounting the duct cover" on page 34.

9.3 Mounting joint connector for installation duct PLM D 0404

- Suitable connector set for PLM D 0404: PLM SI 0404

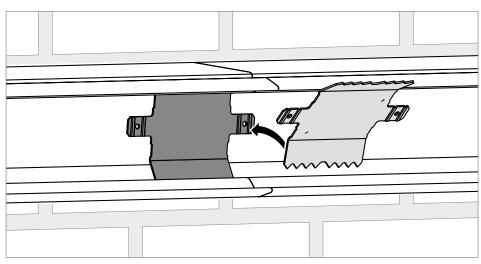


Fig. 30: Mounting connector PLM 0404

1. Insert the joint connector centrally above the joint in the duct and press onto the duct wall.

Note!

After the cable assignment, a foam cable outlet PLM CO 0410 must be inserted at the joint, see also "11 Mounting the duct cover" on page 34.

10 Routing cables



Loss of bearing capacity and function!

The maximum approved cable load is 20 kg per running duct metre. Do not exceed the total load, as otherwise the support and function capability is no longer guaranteed.

When filling the installation duct system, lay the cables in if possible and do not pull them in.

If it is not possible to lay in the cables, observe the following information when pulling in the cables:

- Use a suitable pulling apparatus to pull the cables inside in a straight direction. Use an appropriate aid at the start of the cable (e.g. cable hose, drawbar eye).
- Use suitable steering rollers to pull the cables around bends and T branch pieces, in order to avoid damage to the duct system and cable insulation.
- Never pull cables over sharp edges to exclude the risk of insulation errors.
- Comply with the tensile forces and minimum bend radii specified by the cable manufacturer.
- Establish a connection to the equipotential bonding via the joint connector with a flat connector (size 6.3).

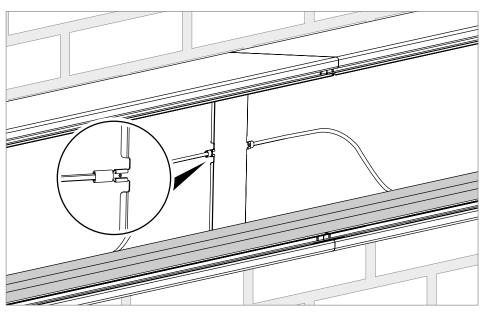


Fig. 31: Attaching the protective conductor

11 Mounting the duct cover

Duct covers and fitting covers are mounted in exactly the same way. Mounting is described using the duct cover as an example.

Note! If possible, always install the duct cover offset to the joint.

11.1 Mounting the duct cover for PLM D 0410, PLM D 0810 and PLM D 1220




Fig. 32: Number and spacing of the locking brackets in the duct cover

1. Check the number and spacing of the locking brackets in the duct cover.

Note! Additional locking brackets can be reordered under Item No. 6288700.

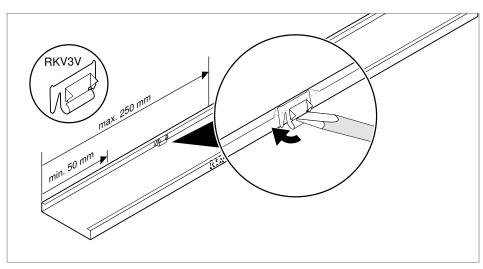


Fig. 33: Inserting locking brackets in the duct cover

2. With shortened duct covers, insert locking brackets on both sides at a distance of 50–250 mm to the joints. Attach the locking brackets at the top and push them back with a flat screwdriver.

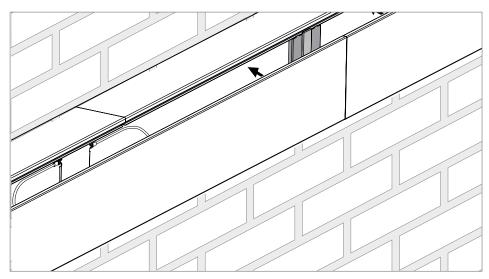


Fig. 34: Snapping-in the duct cover offset

- 3. Insert the cover support at the required joint of the duct cover.
- 4. Snap-in the duct cover centrally above the cover support.

11.2 Mounting the duct cover for PLM D 0404

For adequate flue gas tightness, a foam cable outlet PLM CO 0410 must be inserted at every duct joint and the required cover joint.

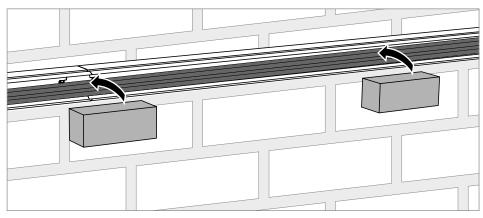


Fig. 35: Inserting the foam cable outlet

- 1. Insert the foam cable outlet at the duct joint.
- 2. Insert the foam cable outlet at the required cover joint.

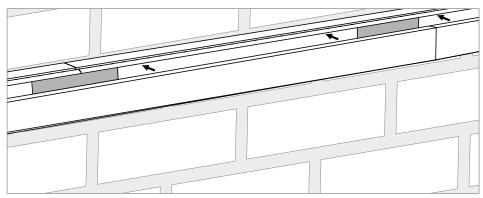


Fig. 36: Snapping-in the duct cover offset

3. Snap-in the duct cover centrally above the foam cable outlet.

12 Creating cable outlets

12.1 Creating an individual outlet

Individual cable outlets can be made on the duct bases with V-TEC cable glands made of brass or polyamide in diameters up to 35 mm (M50).

Note!

Cable outlets cannot be created in the area of a joint connector. The distance between a cable outlet to a wall/ceiling penetration must be at least 750 mm.

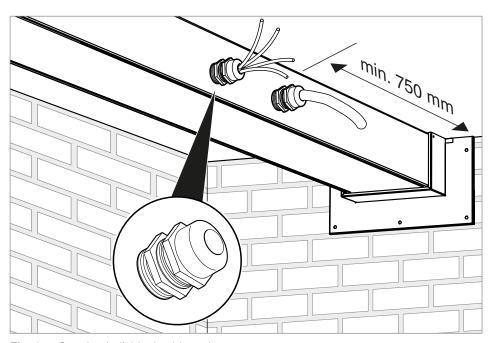


Fig. 37: Creating individual cable outlets

- 1. Create the openings in the duct/fitting with a step drill and deburr them carefully.
- 2. Attach the cable gland.

12.2 Creating multiple cable outlets

Use foam seal PLM CO... to run several cables or whole cable bundles out of the end of the duct.

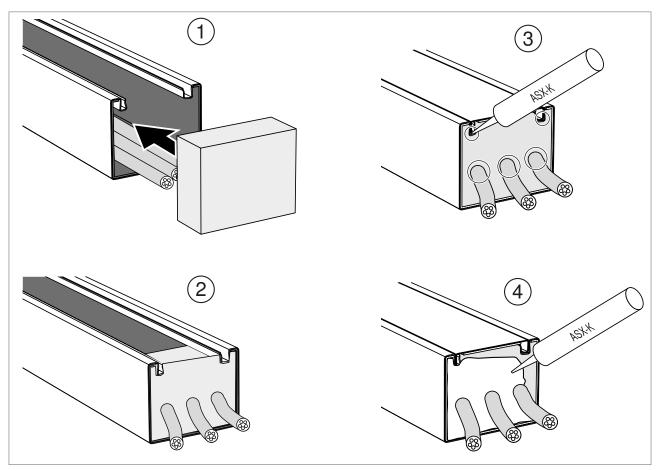


Fig. 38: Multiple cable outlet

Note!

The distance between a multiple outlet to a wall/ceiling penetration must be at least 500 mm.

- 1. Push the foam seal fully into the duct.
- 2. Create openings (e.g. by drilling) and run the cables through individually, or adjust the foam seal to the existing installation with a knife.
- 3. Attach the duct cover and seal the residual openings fully with ASX.
- 4. Fully seal the surface of the foam seal in this way with ASX, creating a dry layer thickness of ≥ 1 mm.

12.3 Junction with PLMD 0404

In order to route branch lines to consumers, a junction can be created with the PLM 0404 installation duct for direct wall and ceiling mounting.

Note! A junction can be created with the installation duct PLM D 0404 for mounting on a support system.

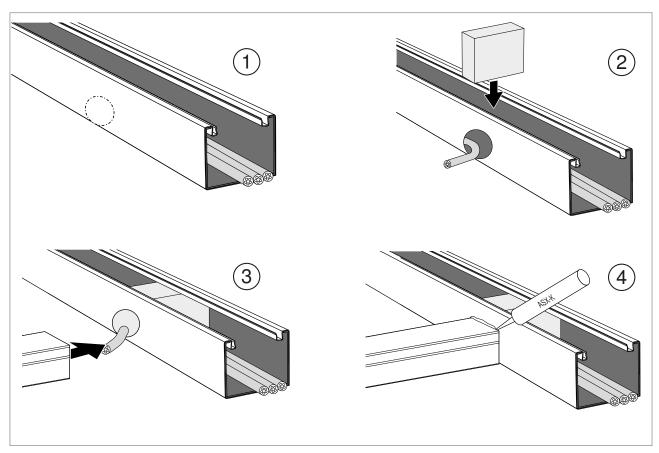


Fig. 39: Junction with PLM D 0404

- 1. Create an opening < 40 x 40 mm for the junction in the side wall of the installation duct and carefully deburr.
- 2. Insert foam seal PLM CO....
- 3. Install installation duct PLM D 0404 immediately in front of the duct opening.
- 4. Fully seal the joint with ASX.

13 Wall connection and wall penetration

Wall connections and wall penetrations must be designed differently depending on fire resistance duration and component opening.

Note!

The wall connections and wall penetrations are shown using the example of a suspended installation on support systems. For other mounting methods, mounting must be arranged in the same way.

Note! Lightweight partitions and solid walls must be at least 100 mm thick.

13.1 Arrangement in the component opening

If the component opening is larger than the duct cross-section, the duct can be connected to or passed through the wall symmetrically or asymmetrically. The minimum and maximum edge distances between the duct and the component opening must be respected, depending on the classification.

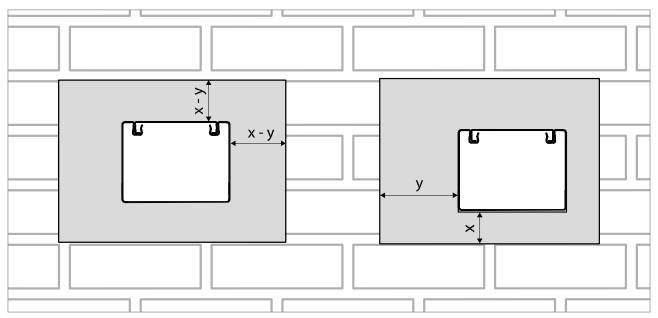


Fig. 40: Symmetric and asymmetric arrangement for the wall connection or wall penetration

Classification	x	у
El30-El60		≤ 50 mm
El30-El90	≥ 10 mm	≤ 30 mm

13.2 Wall connection versions

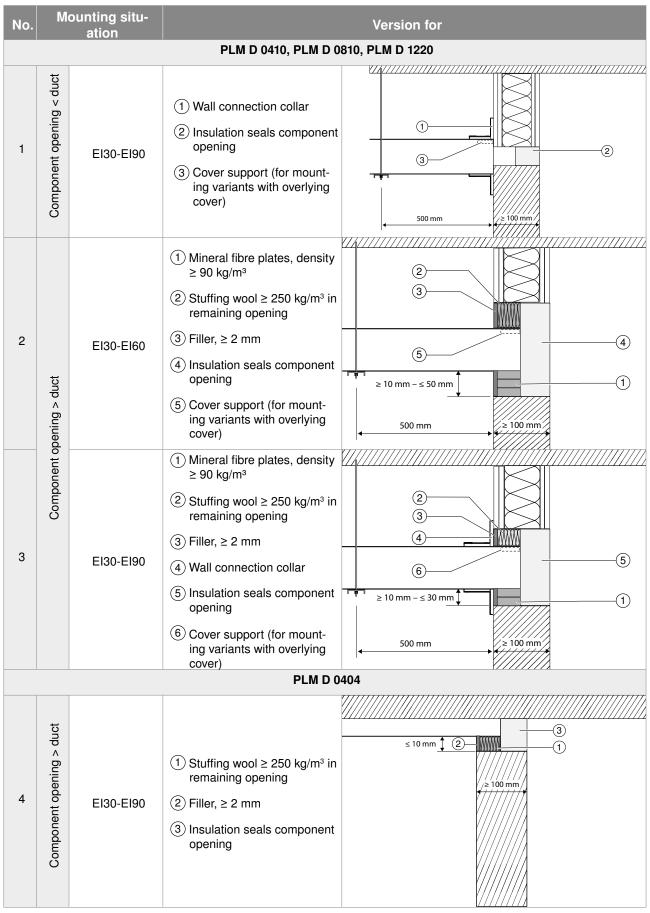


Fig. 41: Wall connection

13.3 Wall penetration versions

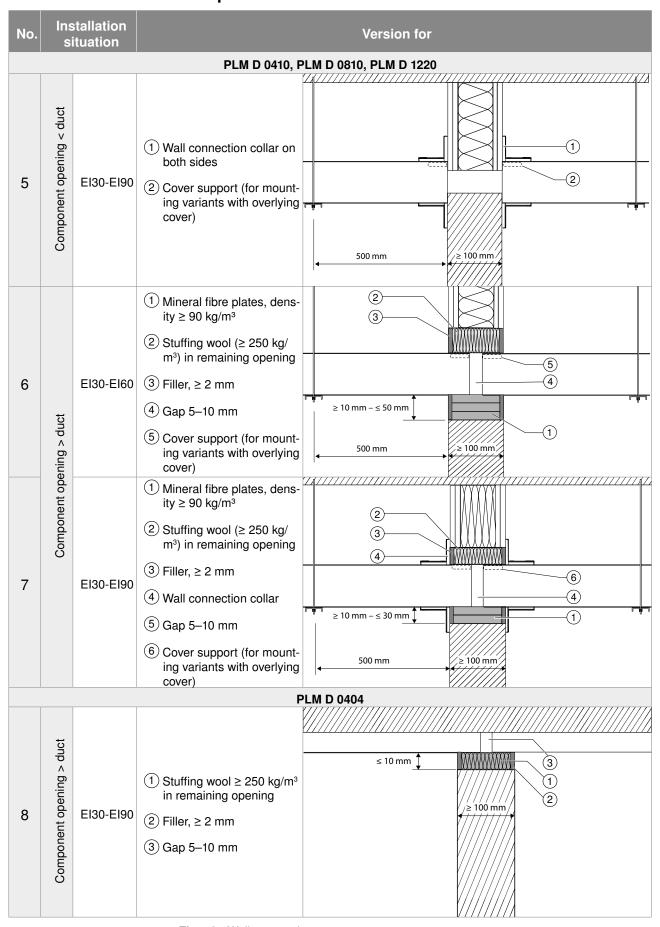


Fig. 42: Wall penetration

13.4 Wall connection collar versions

If a wall connection collar is required for the wall connection or wall penetration, a 2-, 3- or 4-sided wall connection collar is available for the different installation variants:

Wall connection collar PLM WC...

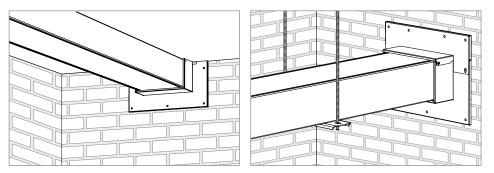


Fig. 43: Wall connection collar PLM WC... 3-sided and 4-sided

- 3-sided for direct wall or ceiling mounting
- 4-sided for mounting on support systems

Wall connection collar set PLM CC...

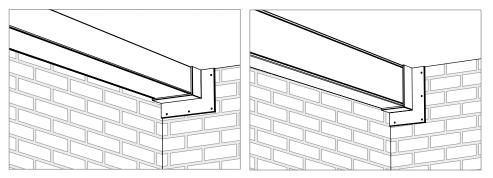


Fig. 44: Wall connection collar set 2-sided

- Set of 2 wall connection collars 2-sided for corner mounting

13.5 Creating a wall connection

Note!

The installation steps are shown using the example of an El90 classification and a component opening > installation duct. The installation steps and sequence for the other versions are to be carried out according to the information in Fig. 38 and Fig. 39.

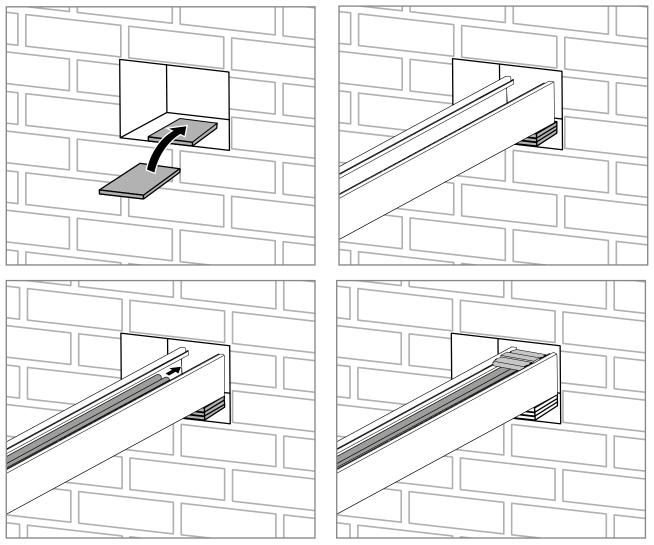


Fig. 45: Installing ducts

- 1. Place mineral fibre plates on the lower reveal of the component opening across the width of the installation duct.
- 2. Install the installation duct and place in the component opening on the mineral fibre plates.
- 3. Lay in the cable, see also "Routing cables" on page 33.
- 4. Insert cable support at the duct end.
- 5. Seal the duct with the duct cover, see also "Mounting the duct cover" on page 34.

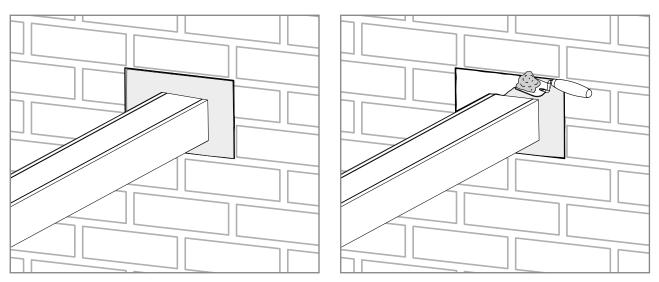


Fig. 46: Sealing the remaining opening

- 6. Seal the complete remaining opening with stuffing wool, density $\geq 250 \text{ kg/m}^3$.
- 7. Completely seal the stuffing wool surface with filler, dry layer thickness ≥ 2 mm.
- 8. Transfer the fixing holes of the wall connection collar to the substrate and pre-drill them according to the type of substrate.

Note! Drilling depth and drill hole diameter according to the approval of the fire protection tested fastening material, see also "6.2 Approved fastening materials" on page 14.

Note! The wall connection collar can be fixed to lightweight partitions using the drywall screw KRS 6x30 (3498100). Fastening by pushing through threaded rods is not required.

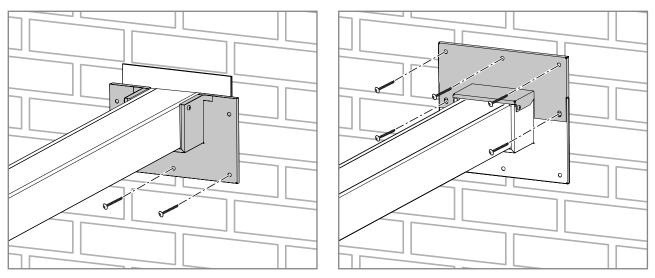


Fig. 47: Mounting the wall connection collar

- 9. Place the wall connection collar on 3 sides around the installation duct from below and fasten it to the 3 lower fastening points.
- 10. Place the cover for the 4-sided wall connection collar on the duct from above and fasten.

Note! No cover is required with 3-sided and 2-sided wall connection collars.

Place the wall connection collar around the installation duct and fasten all fastening points.

Note! Seal the component opening from the other side with an approved insulation or, for a wall penetration, carry out the installation on the other side in exactly the same way. There must be a gap of 5–10 mm between the fire protection ducts in the component opening to prevent heat transfer from duct to duct in the event of fire.

14 Ceiling connector

Ceiling connectors are only permissible for solid ceilings with a thickness of 150 mm and a component opening < duct cross-section.

The ceiling connector is executed identically for all fire resistance classes.

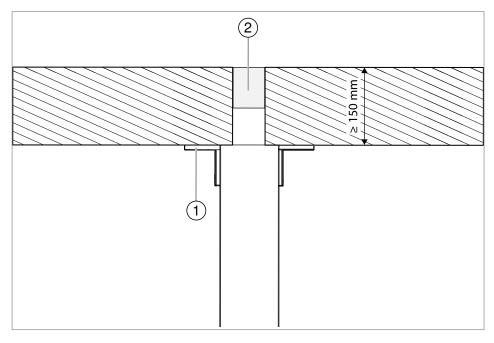


Fig. 48: Ceiling connector El30-El90

- 1. Let the installation duct butt-up in front of the wall.
- 2. Mount the wall connection collar 1 as in Fig. 44.
- 3. Seal the component opening from the other side with an approved insulation (2).

15 Completing mounting

15.1 Declaration of conformity

National specifications – Germany:

According to Annex 4 Section 8.3 of MVV-TB, the installer is obliged to confirm the proper installation in accordance with the mounting instructions in the form of the declaration of conformity after the installation of the fire-resistant installation duct system. The declaration of conformity and the mounting instructions must be handed over to the client.

A template for the declaration of conformity can be found in the annex to these mounting instructions.

16 Maintaining the system

The PYROLINE® Rapid PLM installation duct is maintenance-free.

Carry out a visual inspection of the installation duct as part of the inspection of the electrical systems. Replace any duct parts that may be damaged.

Function is guaranteed as part of the external monitoring procedure in accordance with the ETA.

17 Dismantling the system

Dismantling of all the elements of the installation duct system takes place in the reverse order to mounting.

18 Disposing of the system

National laws and regulations must be observed for disposal.

Disposal during mounting

- The residual material of the installation duct and the mortar can be disposed of as mixed construction site waste.
- Dispose of the residual material of the support system, as well as separating retainers, separating clamps and brackets, in the same way as scrap metal.

Disposal during building demolition

- The fire protection ducts must be disposed of as mixed construction waste.
- The support systems, as well as separating retainers, separating clamps and brackets, must be disposed of in the same way as scrap metal.

Disposal after a fire



Danger of falling components!

If there is a fire, support systems and fastenings of the installation duct can be massively impaired in their function and can fall. Falling components can cause serious injuries. During disposal, proceed with extreme caution and before dismantling, check components for instability. Wear safety shoes and a helmet.



Irritant effect!

If there is a fire, burning cable insulation can create corrosive gases, which have an irritant and corrosive effect. When disposing of fire protection ducts which have been subjected to a fire, wear breathing protection and protective clothing.

If the PYROLINE® Rapid PLM installation duct has suffered fire damage, the complete installation duct must be replaced. If the fire damage occurred in a duct, then check whether a replacement of the support system is necessary. In all other cases, the support system must be replaced.

We recommend obtaining the advice of a local fire damage restorer during disposal.

19 Technical data

Туре	Designation	Dimensions [mm]	Surface	Item no.
Installation duct				
PLM D 0404 Insta			FS	7218000
	Installation duct	40 x 40 x 2,000	RAL 9010	7218002
	Installation duct		FS	7218004
PLM D 0410		40 x 100 x 2,000	RAL 9010	7218006
	Installation duct		FS	7218008
PLM D 0810		80 x 100 x 2,000	RAL 9010	7218010
			FS	7218012
PLM D 1220	Installation duct	120 x 200 x 2,000	RAL 9010	7218014
Fittings				
			FS	7218038
PLM EC 0410	External corner	320 x 100 x 320	RAL 9010	7218040
			FS	7218042
PLM EC 0810	External corner	320 x 100 x 320	RAL 9010	7218044
			FS	7218046
PLM EC 1220	External corner	370 x 200 x 370	RAL 9010	7218048
			FS	7218050
PLM IC 0410	Internal corner	290 x 100 x 290	RAL 9010	7218052
			FS	7218054
PLM IC 0810	Internal corner	330 x 100 x 330	RAL 9010	7218056
	Internal corner		FS	7218058
PLM IC 1220		330 x 200 x 330	RAL 9010	7218060
			FS	7218062
PLM FA 0410	Flat angle	350 x 350 x 40	RAL 9010	7218064
			FS	7218066
PLM FA 0810	Flat angle	350 x 350 x 80	RAL 9010	7218068
			FS	7218070
PLM FA 1220 Fla	Flat angle	350 x 350 x 120	RAL 9010	7218072
PLM TB 0410	T branch piece		FS	7218074
		500 x 300 x 40	RAL 9010	7218076
	T branch piece		FS	7218078
PLM TB 0810		500 x 300 x 80	RAL 9010	7218080
5.1.4 5. 1. 2. 2.	T branch piece		FS	7218082
PLM TB 1220		500 x 400 x 120	RAL 9010	7218084

			FS	7218114
PLM BR 0810	45° bend, rising	435 x 100 x 257	RAL 9010	7218116
PLM BR 1220 45° be		422 x 200 x 291	FS	7218118
	45° bend, rising		RAL 9010	7218120
		455 x 100 x 197	FS	7218106
PLM BF 0810	45° bend, falling		RAL 9010	7218108
		498 x 100 x 215	FS	7218110
PLM BF 1220	45° bend, falling		RAL 9010	7218112
PLM RP 0810			FS	7218098
	Reduction	360 x 100 x 80	RAL 9010	7218100
			FS	7218102
PLM RP 1220	Reduction	160 x 200 x 120	RAL 9010	7218104
			FS	7218134
PLM CC 0410	Wall connection collar set	85 x 175 x 117	RAL 9010	7218136
			FS	7218138
PLM CC 0810	Wall connection collar set	85 x 175 x 157	RAL 9010	7218140
			FS	7218142
PLM CC 1220	Wall connection collar set	85 x 275 x 197	RAL 9010	7218144
D. I. I. I. I.		85 x 253 x 193	FS	7218122
PLM WC 0410	Wall connection collar		RAL 9010	7218124
		85 x 253 x 233	FS	7218126
PLM WC 0810	Wall connection collar		RAL 9010	7218128
DI 1111/0 (000			FS	7218130
PLM WC 1220	Wall connection collar	85 x 253 x 273	RAL 9010	7218132
		105 x 20 x 41	FS	7218086
PLM EP 0410	End piece		RAL 9010	7218088
		105 x 21 x 81	FS	7218090
PLM EP 0810	End piece		RAL 9010	7218092
		205 x 20 x 121	FS	7218094
PLM EP 1220	End piece		RAL 9010	7218096
Accessories				
PLM CO 0410	Foam seal	40 x 40 x 100	_	7218158
PLM CO 0810	Foam seal	80 x 40 x 100	_	7218160
PLM CO 1220	Foam seal	120 x 40 x 200	_	7218162
PLM WB 0410	Cable clamp, wall	22 x 60 x 49	FS	7218152
PLM WB 0810	Cable clamp, wall	62 x 60 x 49	FS	7218154

D11414D / 222				
PLM WB 1220	Cable clamp, wall	102 x 60 x 132	FS	7218156
PLM CB 0410	Cable clamp, ceiling	44 x 40 x 22	FS	7218146
PLM CB 0810	Cable clamp, ceiling	44 x 45 x 62	FS	7218148
PLM CB 1220	Cable clamp, ceiling	94 x 45 x 102	FS	7218150
PLM LI 100 Installation duct cover		12 x 77 x 2,000	FS	7218020
	Installation duct cover		RAL 9010	7218022
		12 x 177 x 2,000	FS	7218024
PLM LI 200	Installation duct cover		RAL 9010	7218026
PLM SU 100 Support profile			FS	7218164
	Support profile	200 x 67 x 12	RAL 9010	7218166
PLM SU 200 Support profile		300 x 67 x 12	FS	7218168
	Support profile		RAL 9010	7218170

Tab. 4: Technical data


Declaration of conformity	
Name and address of the company, tha	t carried out the mounting of the installation duct
Construction project and building	
Creation date	
pleted and erected professionally with re	tant installation duct (subject of approval) has been com- espect to all details and in compliance with the Declaration ovisions of the European Technical Assessment No. ETA e mounting instructions dated 05/2022.
Place, date	Stamp and signature
This confirmation must be given to the distriction supervisory board.	client for forwarding, if necessary, to the responsible con-

X







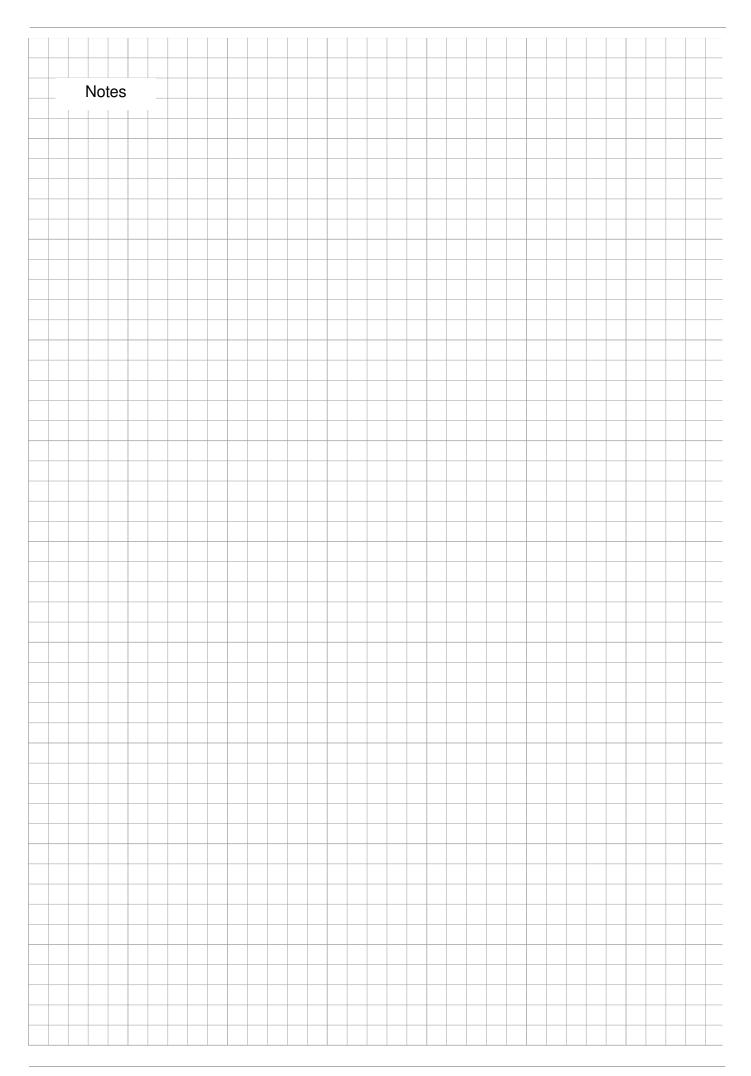

OBO Bettermann Holding GmbH & Co. KG

P.O. Box 1120 58694 Menden GERMANY

Customer Service Germany

Tel.: +49(0)2371 7899-2000 Fax: +49(0)2371 7899-2500

E-mail: info@obo.de

www.obo-bettermann.com

OBORD 210056 Date 09/2021



